



de Oude Pastorie



INSTRUCTIONS FOR EQUIPMENT

DISHWASHER – PLEASE USE WITH CARE!!!!

The Operating Manual is in cupboard behind you! Please help us to look after this luxury! So please do not let children play with the buttons. You can activate and de-activate the child-lock by pressing RINSE and HALF LOAD simultaneously and holding it in for a while.

Please fill with salt or rinse-aid when the appropriate red lights indicates!

Dishwasher Salt () goes into the hole @ the inside below the bottom tray.

Rinse Aid () goes next to the dishwashing powder.

If you are unsure please inform us when delivering the key.

Put ONLY dishwasher-powder into clipped dispenser on inside of door. 25g for the INTENSIVE program to 10G for the QUICK wash.

Switch it on, choose the program – we recommend AUTO or ECONOMY and press the big silver button to start.

Please do not interfere by opening it whilst it is washing – we all hate being interrupted!!!

Please do not put the black iron pots in the dishwasher.

DRYER

Handle with care! And please do not overload – clothes crease more.

Press ON / OFF

Turn knob CLOCKWISE only to select time.

Switch OFF again when finished.

Clean filter every time: the lint filter assembly is located @ the front of the door on the outside.

While holding door closed with one hand, insert 2 fingers of other hand into the large central holes on the cover and pull the ring free. Remove the filter from the door by pulling on the central grip. Gently rub filter mesh to loosen fluff. Re-assemble! Thanx!!!

The Operating Manual is in cupboard behind you!

WASHING MACHINE

Please do not let children play with the buttons. You can activate and de-activate the child-lock by pressing Temp button and Option(Rinse+/Pre Wash) simultaneously and holding it in for a while.

Always check the temperature before START.



de Oude Pastorie



Softener goes into the middle. Try to use a tablespoon of white vinegar instead of StaSoft in the middle of the Dispenser Drawer.

If you want to pre-wash put detergent (NO handwash soap or dishwashing detergent please!) in right dispenser.

Main detergent goes left.

Press POWER

Press START/PAUSE for basic wash. For specific needs turn the knob to what you want or select the appropriate buttons before pressing START/PAUSE.

The Operating Manual is in cupboard behind you!

PLEASE DO NOT PUT ANYTHING ON THE OVEN-DOOR WHEN IT IS OPEN!!!

GLASS ONLY !

To help us you can rinse the glass and put it in without the lids.

Does not matter if it is broken.

Containers and bottles only.